


Alfa


Installation instructions

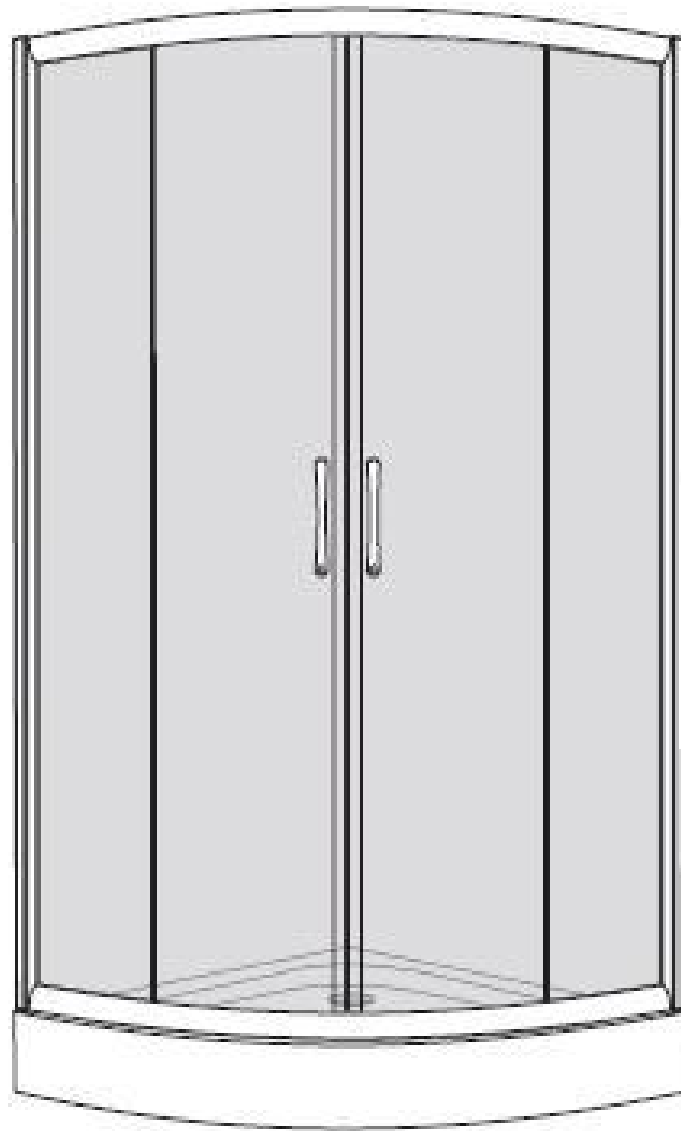

SIZE : 80x80x200 CM


Alfa

Installation Instructions

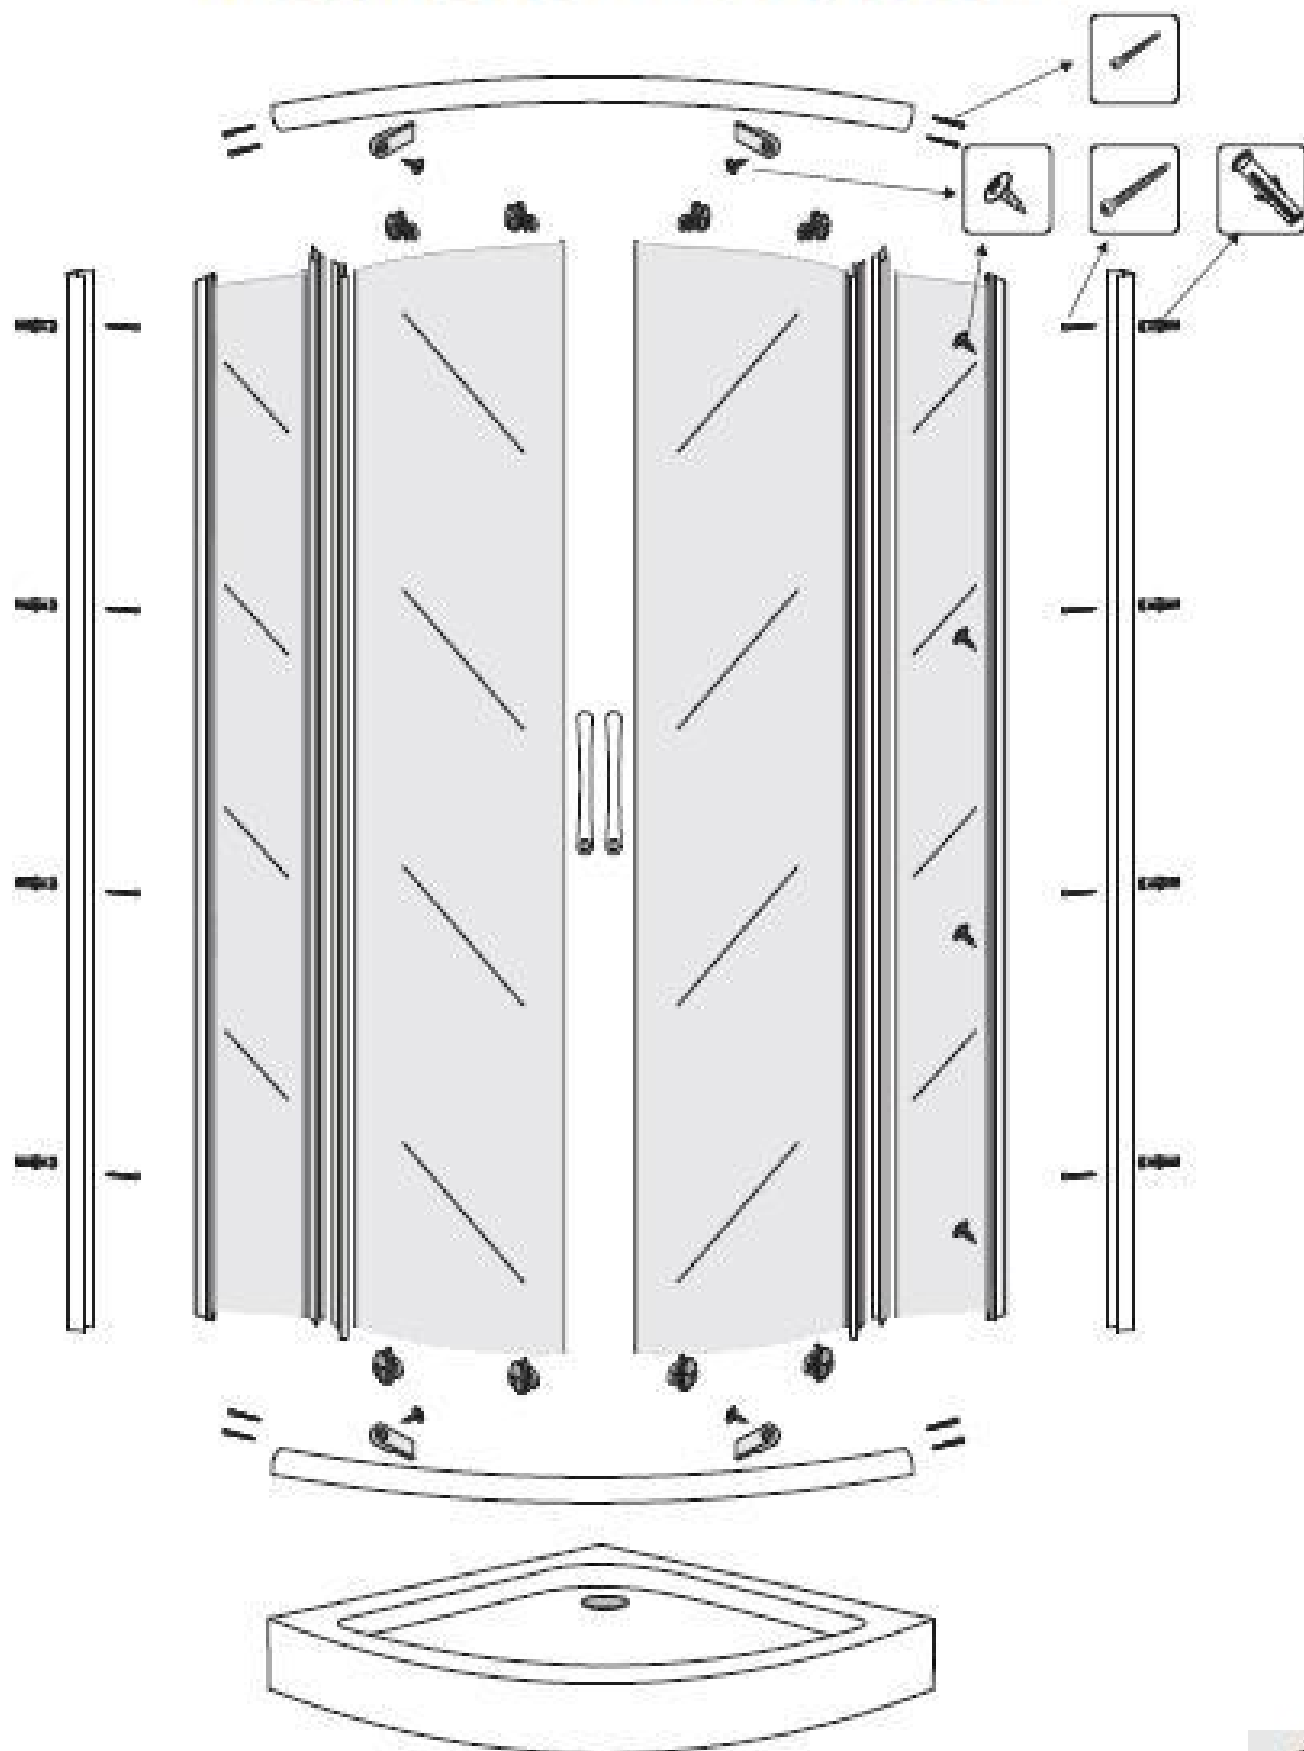


Alfa


Installation Instructions

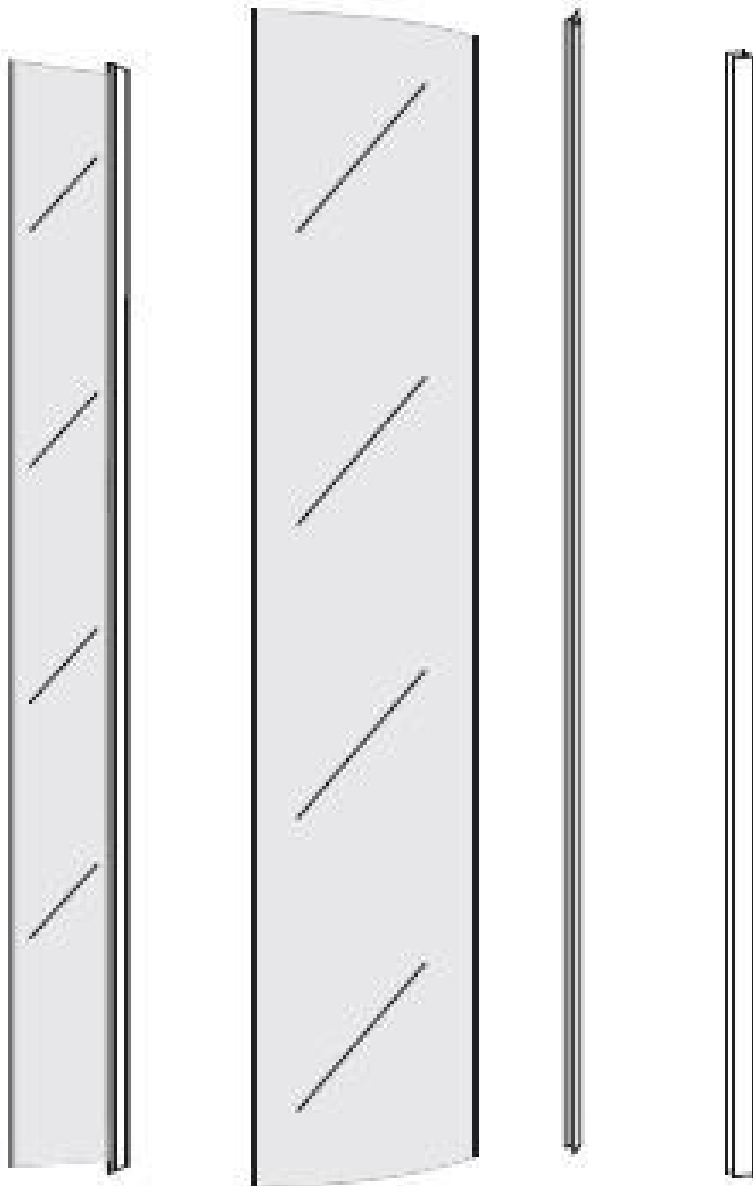


VERTICAL SEAL

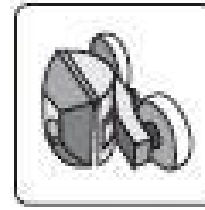

4PCS

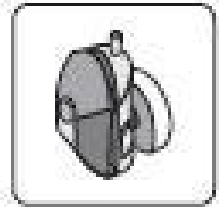

4PCS

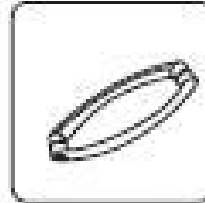

2PCS



8PCS



4PCS




4x25mm
8PCS



4PCS




4x12mm
8PCS

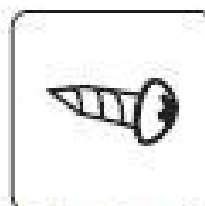

4x12mm
4PCS






8PCS

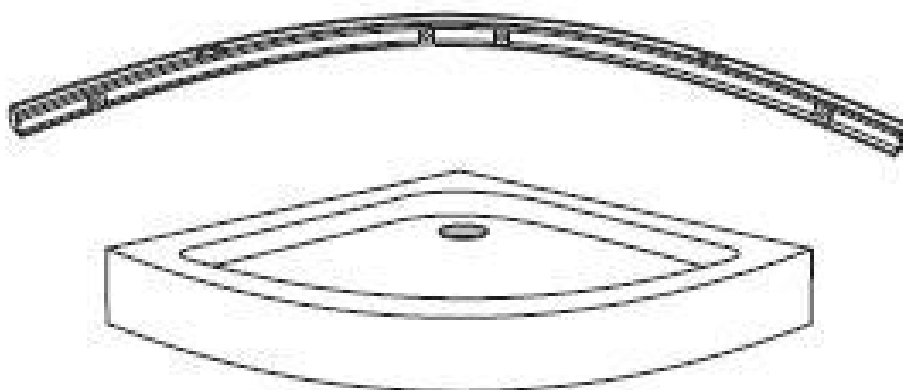




3mm

1.

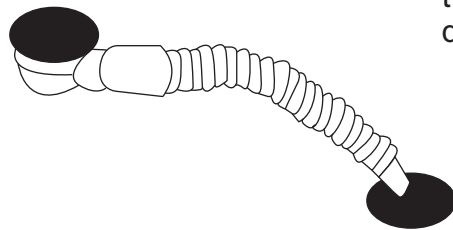
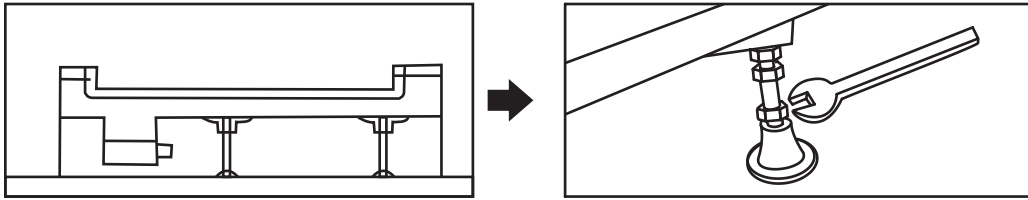
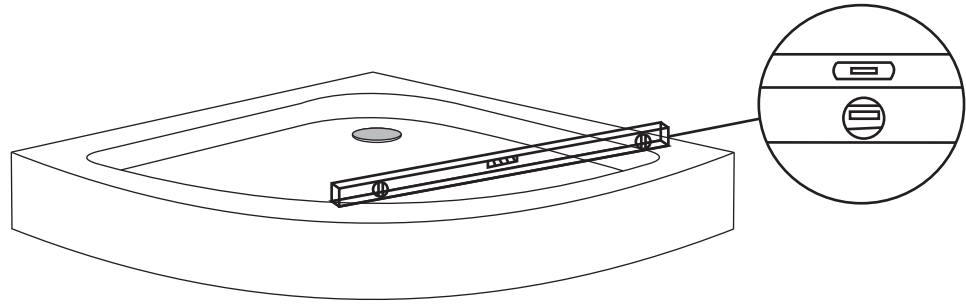


Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole



2.

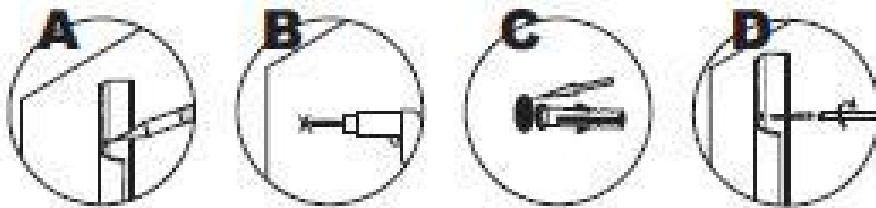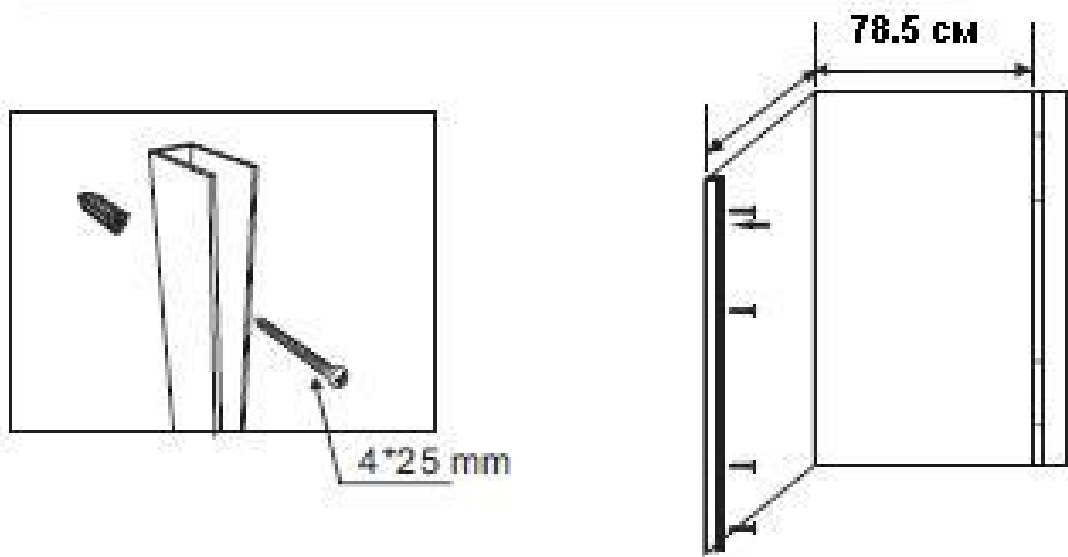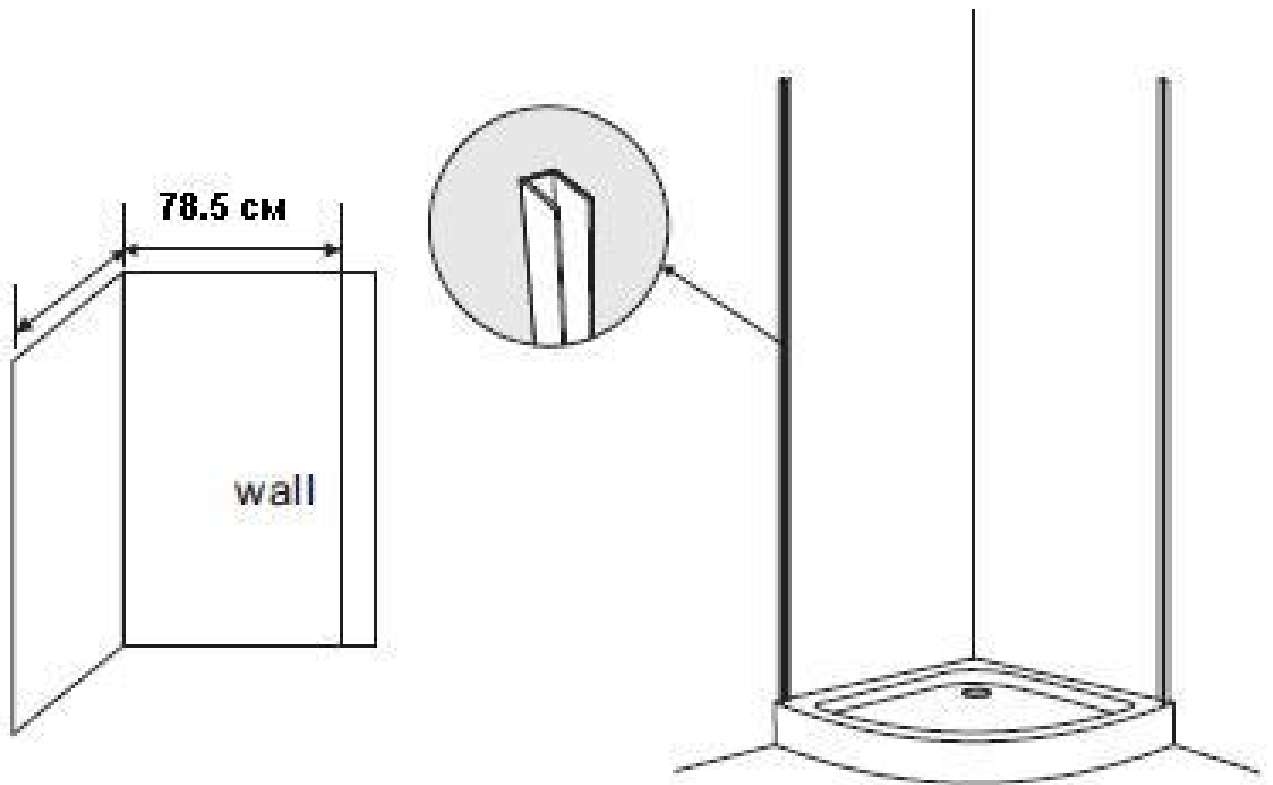




3.

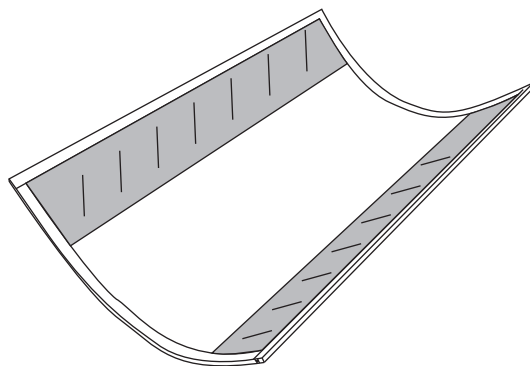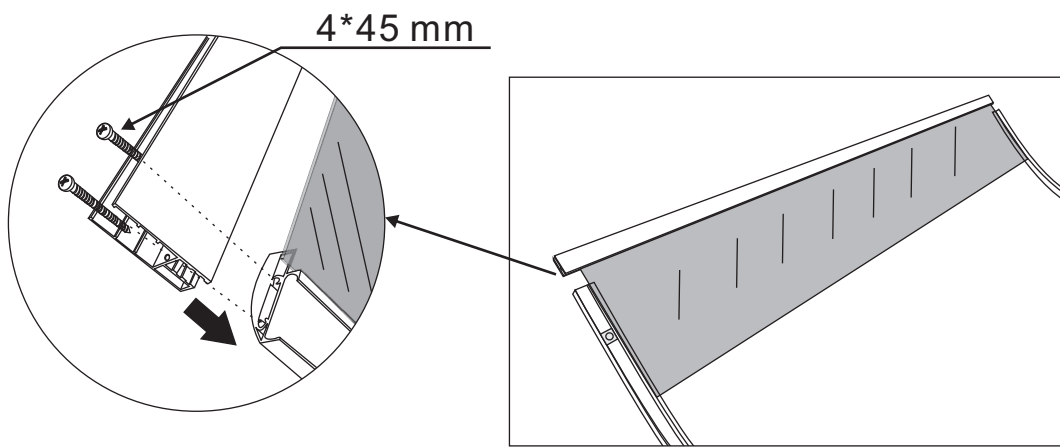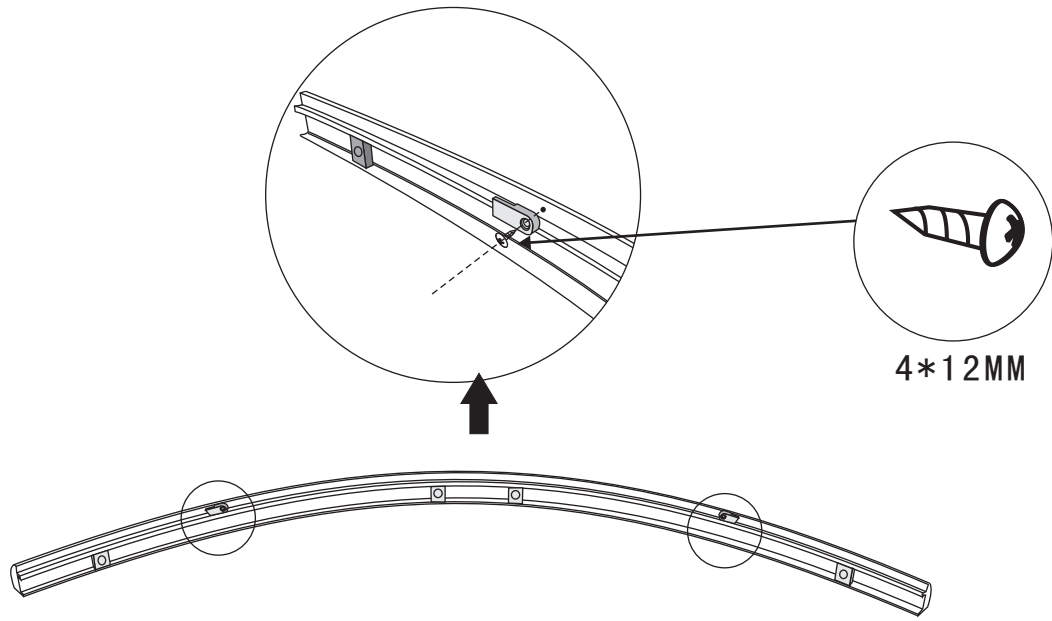





4.

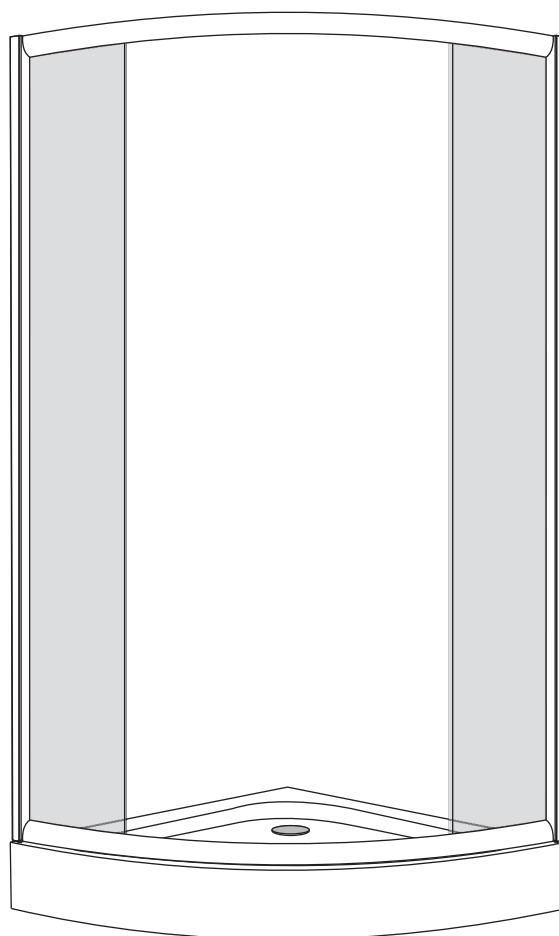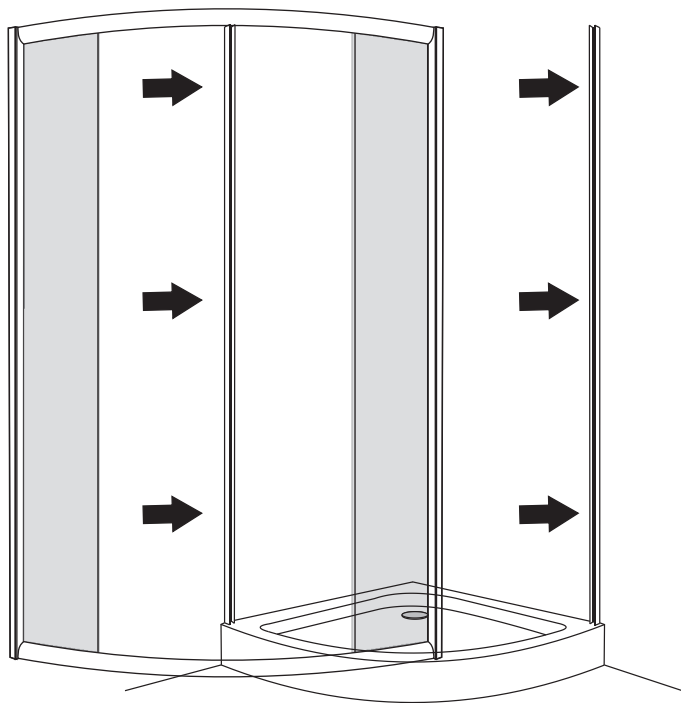


Installation Instructions

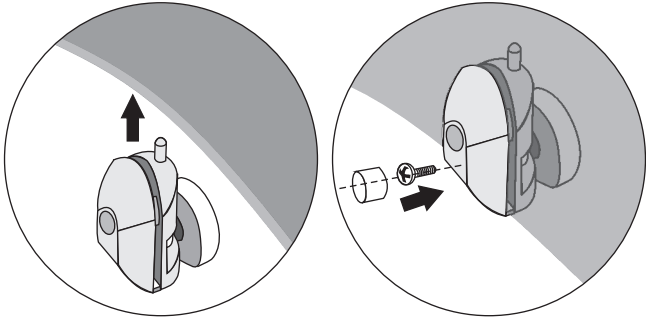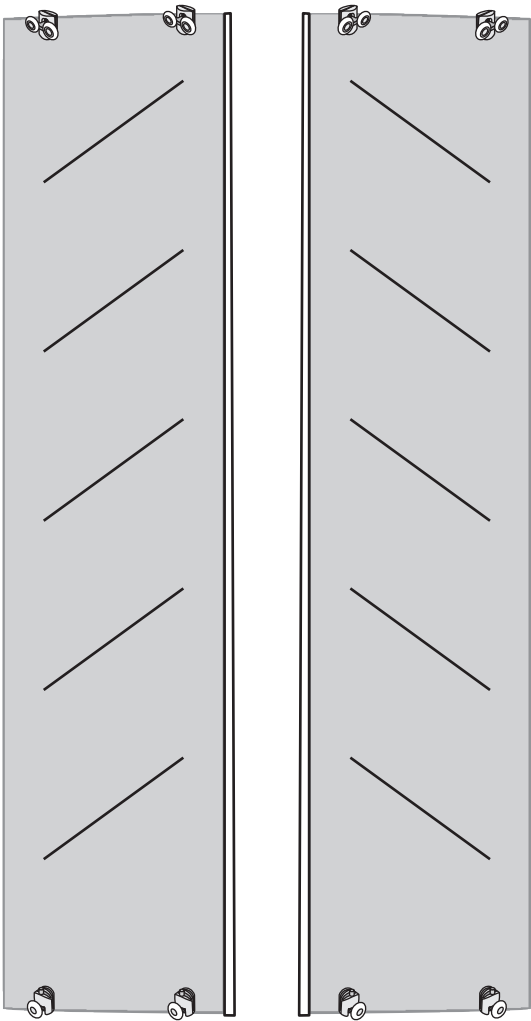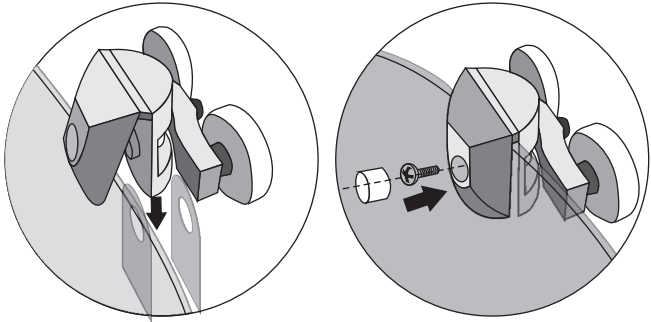

Installation Instructions

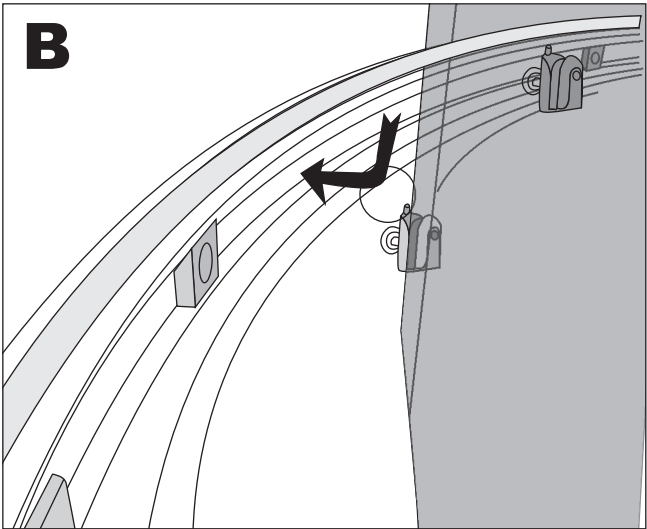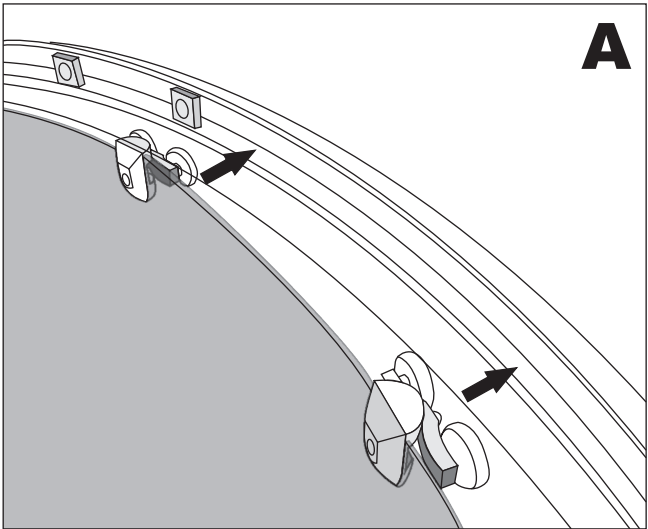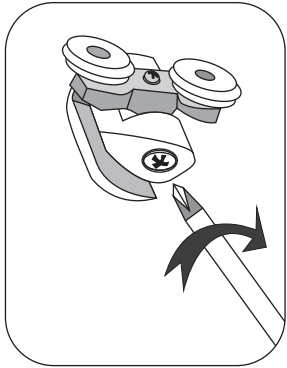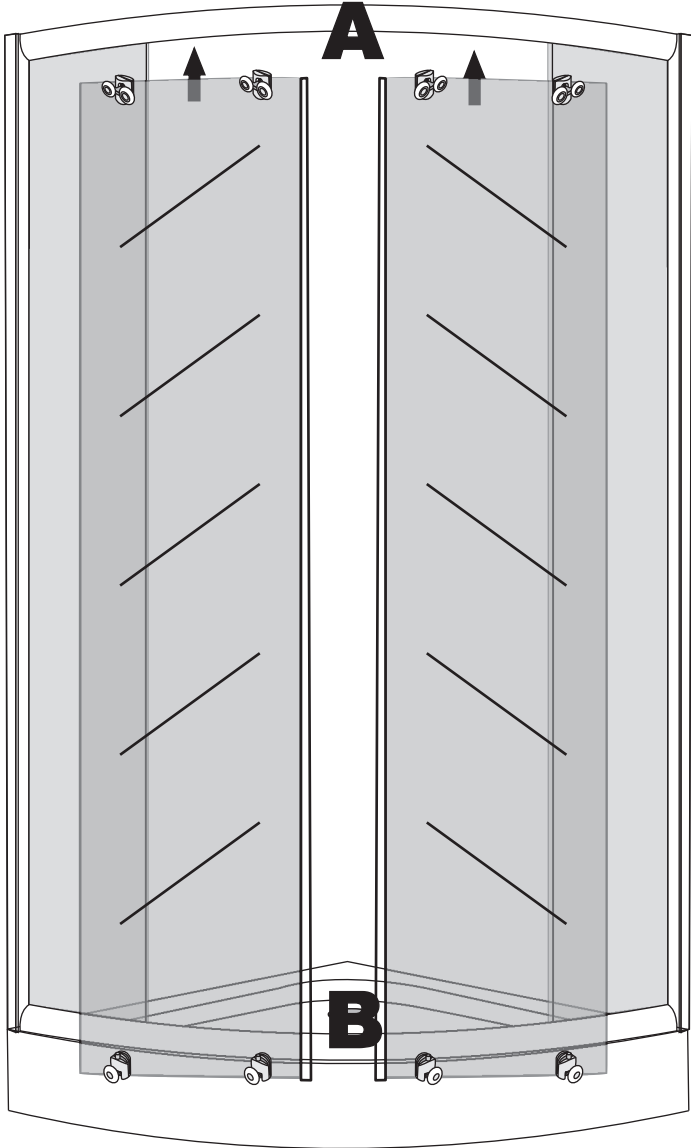

7.

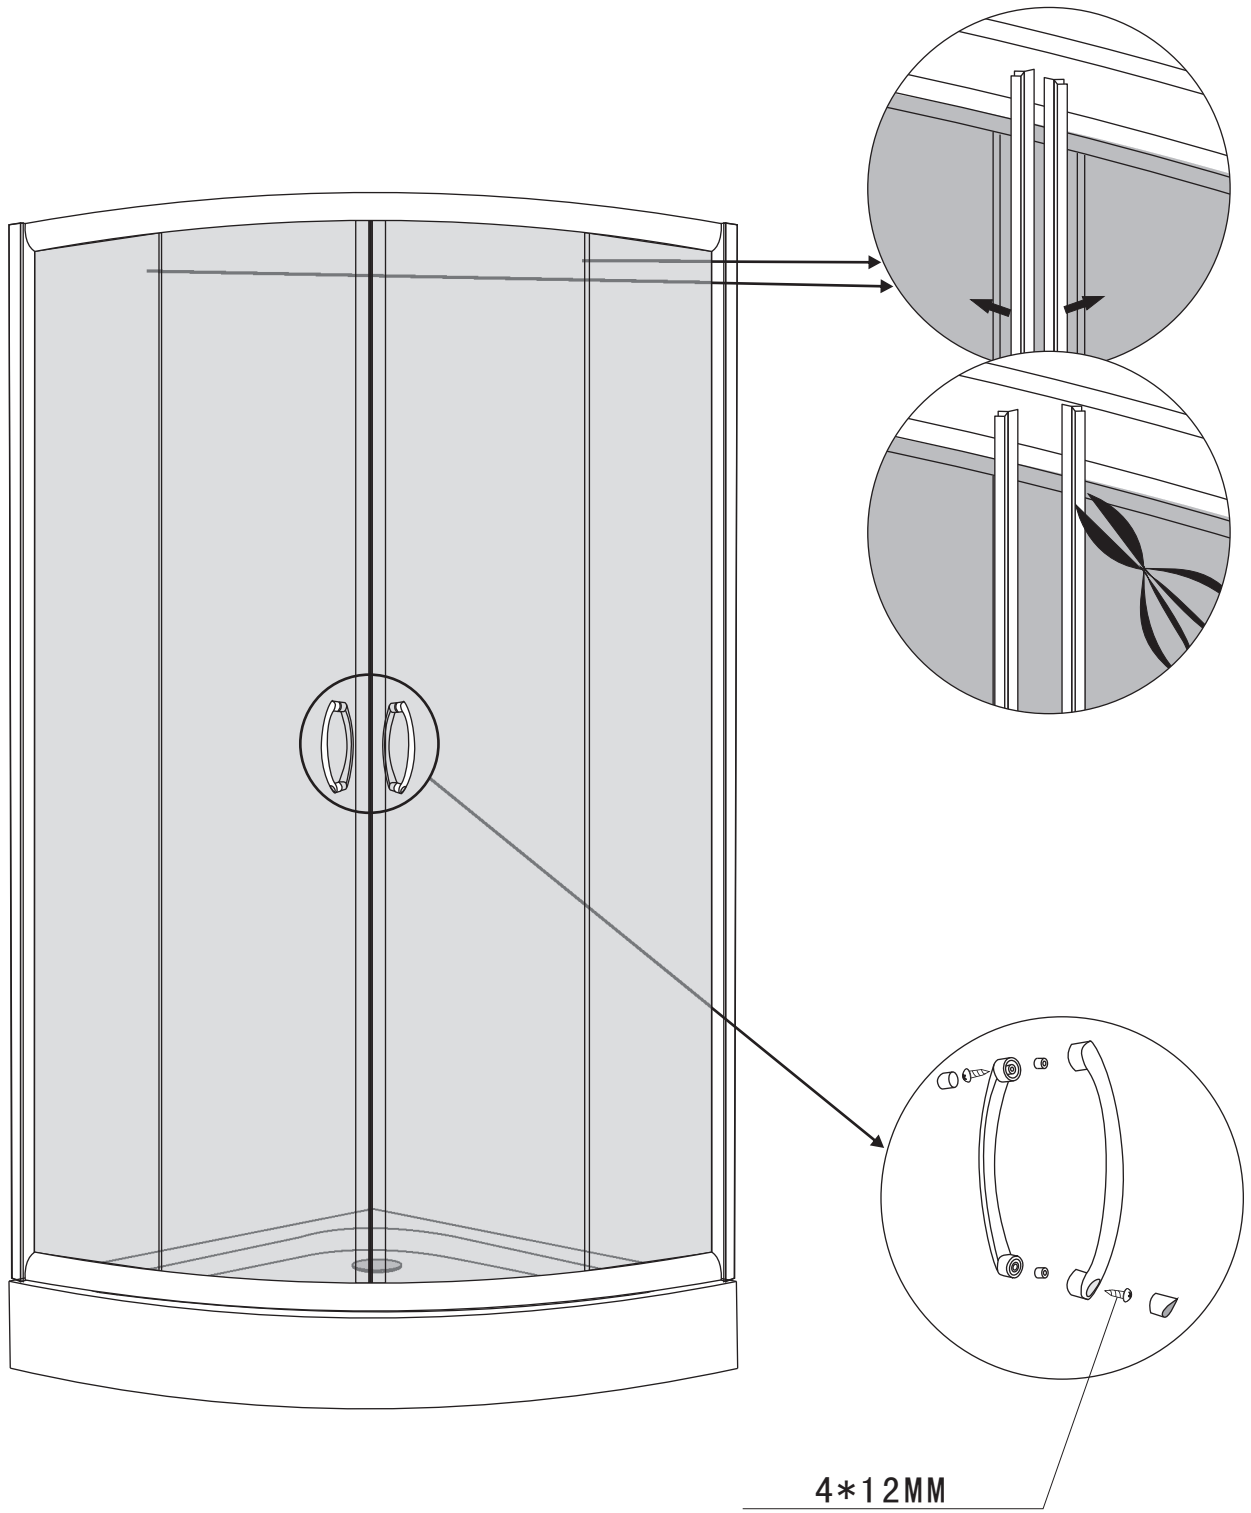

8.

